

## How to Set Barcode Scanner

[RS-232]

Take symbol type LS1203 as an example, Barcode Scanner should be set before using, and scan from Step1 to Step6 in sequence.

Step1. [Keyboard Wedge Interface]

IBM PC/AT and IBM PC COMPATIBLES



Step2. [Country Keyboard Types (Country Codes)]

NORTH AMERICAN (Default)



Step3. [RS-232 Interface]

STANDARD RS-232



Step4 ~ 6. [Set Scan Data Transmission Format]

SCAN OPTIONS

<DATA><SUFFIX>

ENTER




## [USB]

Take ZEBEX USB Barcode Scanner as an example, settings should be done before using. Set the Interface first, scan from Step1~Step3.

Step1. [Start of Configuration](#)

Step2. [\[Interface Selection\]](#) ->USB

Step3. [End of Configuration](#)

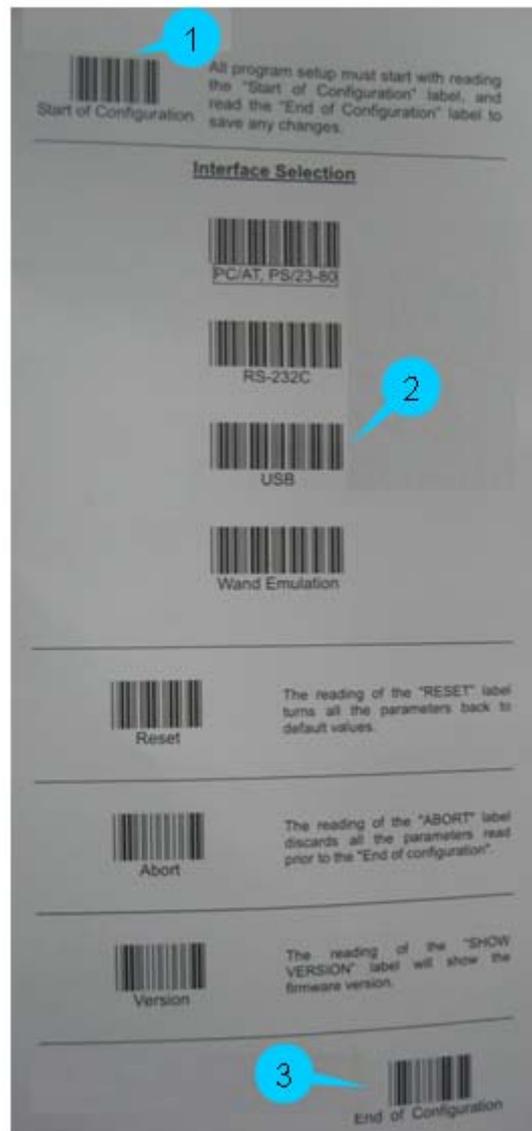

Now go on to USB Mode basic settings, scan from Step1 ~ Step5.

Step1. Start of Configuration

Step2. [Keyboard Type] -> US Keyboard

Step3. [Good Read Beeper Selection] -> Medium

Step4. [Scanning Mode Selection] -> Trigger Mode

Step5. End of Configuration

